



# 使用說明書

Artist 22 2<sup>nd</sup> Generation

# Safety Precautions

This manual uses the following symbols to ensure that the XP-PEN Tablet is used correctly and safely. Be sure to read and observe the Safety Precautions.



**Do not use this product in a control system area that requires a high degree of safety and reliability.**  
In such a system, this product could negatively affect other electronic devices and could malfunction due to the effect of those devices.



**Turn the power off in areas where use of electronic devices is prohibited.**  
Turn the power off your tablet when onboard an aircraft or in any other location where use of electronic devices is prohibited, otherwise it may negatively affect other electronic devices in the area.  
Unplug the USB connector from this product and turn the power off.



**Keep the product away from infants and young children.**  
Accessories to this gadget may present a choking hazard to small children. Keep all accessories away from infants and young children.



## CAUTION

### Do not place this product on unstable surfaces.

Avoid placing this product on unstable, tilted surfaces or any locations exposed to excessive vibrations. This may cause the tablet to fall or impact surfaces which can result in damage and/or malfunction to the tablet.

### Do not place heavy objects on top of this product.

Do not place heavy objects on the product. Do not step on, or place your body weight on this product as this may cause damage.



### Avoid extreme high or low-temperature exposure to the XP-PEN tablet.

Do not store this product in areas that drop below 5°C or above 40°C. Avoid locations with excessive temperature fluctuations. This may result in damage to the product and its components.



### Do not disassemble

Do not disassemble or modify this product. Doing so may expose you to heat, fire, electric shock and injury. Disassembling the product will void your warranty.



### Do not use alcohol for cleaning

Never use alcohol, thinner, benzene or other mineral solvents that may discolor and cause deterioration to the product.



### Do not expose to water

Be cautious of water and all liquids that may be near the tablet. Exposure to water or liquid could damage the product.



## CAUTION

### Avoid placing metallic objects and especially magnetic objects on the tablet.

Placing metallic and/or magnetic objects on this product during operation may cause malfunction or permanent damage.



### Do not strike the pen against hard objects.

Striking the pen against hard objects can cause damage to the pen.



### Avoid gripping the pen too tightly, and DO NOT use excessive weight/pressure on the Express Key button and pen.

The stylus pen is a high-precision instrument. Avoid pressing too tightly on the Express Key button, and keep any objects from covering the pen to avoid potential damage. Keep the pen away from areas of high dust, contaminants, or any particulate matter that can effect or damage the pen.

## Limitation of Liability

1. XP-PEN shall in no event be liable for damages resulting from fires or earthquakes, including those caused by third parties and those arising from user misuse, abuse or neglect.
2. XP-PEN shall in no event be liable for incidental damages- including but not limited to loss of business income, interruption of business activities, corruption or loss of data – that arise from use or failure to use this product correctly.
3. XP-PEN shall in no event be liable for damage resulting from uses not documented in this manual.
4. XP-PEN shall in no event be liable for damages or malfunction arising from the connection to other devices or use of third party software.

# 目錄

I. 產品總覽

II. 連接方式 (2種)

III. 支援系統

IV. 下載

V. 安裝

VI. 驅動介紹

1. 工作區域


2. 應用程式

3. 筆設置

4. 設置

感謝您購買XP-PEN產品。產品使用說明書目前僅支援繁體中文、英文、日文、德文、韓文、義大利文、法文、俄文、西班牙文、葡萄牙文及波蘭文。若您的語言並未包含在裡面，在此深感抱歉。


## I. 產品總覽

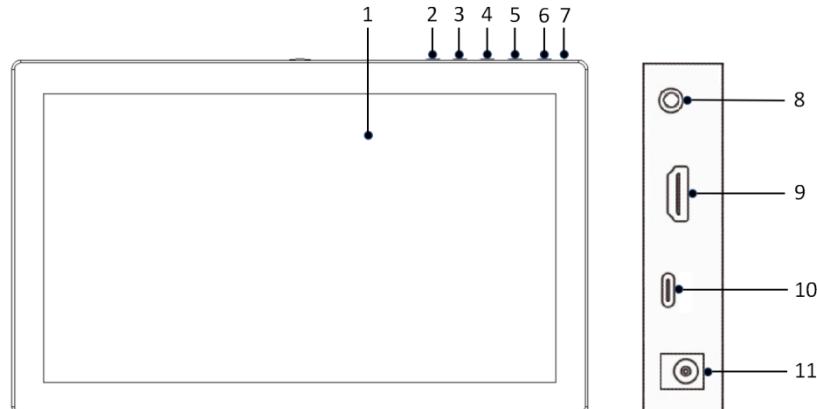


1. 顯示/工作區域
2. 返回按鍵
3. -按鍵
4. +按鍵
5. 功能表/確認按鍵
6. 電源開關(請按壓約3秒開啟)
7. 電源指示燈（白色）
  - a. 常亮：數位屏已連接至電腦且電源是開啟狀態。
  - b. 閃爍：數位屏電源是開啟狀態但未收到電腦傳送的信號。
  - c. 熄滅：數位屏電源是關閉狀態。
8. 耳機接口
9. HDMI接口
- 10.USB-C接口
- 11.電源接口

## II. 連接方式 (2種)

1. HDMI連接: 用HDMI及“USB-C to A”線將數位屏連接到您電腦的HDMI 和 USB接口。再將電源接口連接至牆壁插座的變壓器。

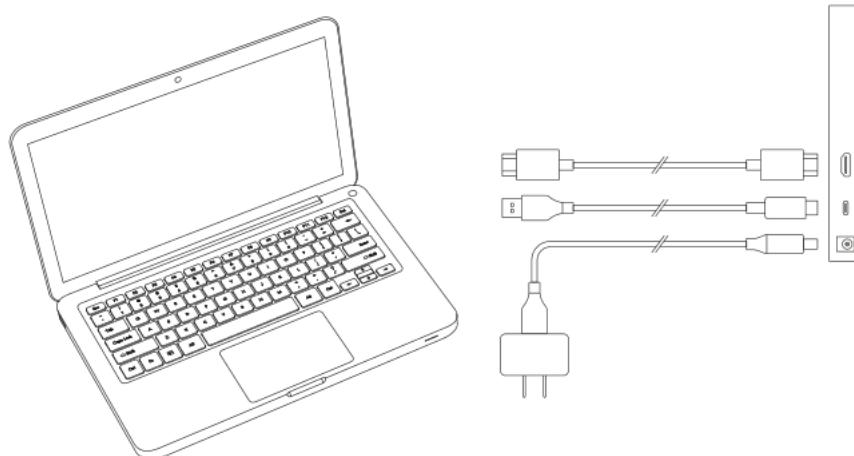

2. USB-C連接(適用於全功能USB-C接口): 用USB-C線將數位屏連接到您電腦的USB-C接口。再將電源接口連接至牆壁插座的變壓器。

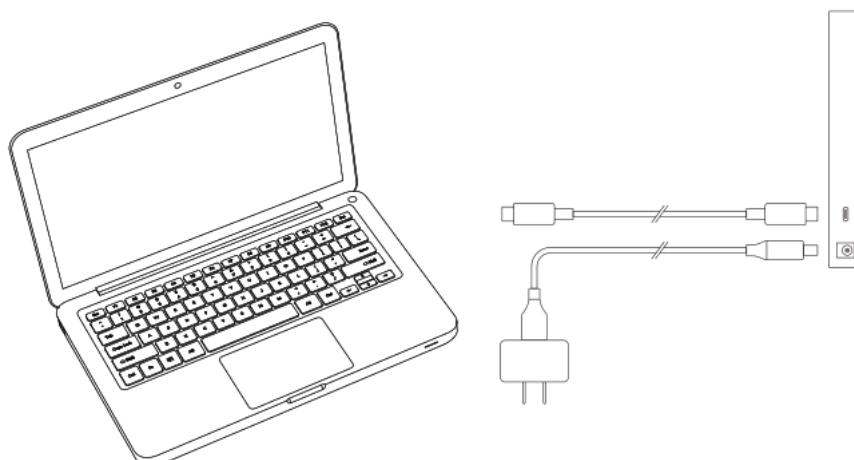

## III. 支援系統

Windows 7及以上

Mac OS X 10.10及以上

## IV. 下載

請到XP-PEN官網 ([www.xp-pen.com](http://www.xp-pen.com)) 根據您購買的產品型號下載對應的驅動程式。

## V. 安裝

下載完成後，請解壓資料夾並運行“.exe”檔（Windows）或“.dmg”（Mac）檔，然後按步驟操作，直至安裝完成。

### 注意：

1. 安裝前請先暫時關閉防毒軟體及防火牆，並關閉所有已開啟的軟體。
2. 若電腦已安裝其他數位屏的驅動，請先行卸載。
3. 建議安裝完成後重啟電腦。

## VI. 驅動介紹

驅動安裝完成後，將數位屏和電腦連接，然後雙擊打開驅動程式即可開始自定義設置您的設備。

### 保存配置：

如果您需要使已更改的配置在退出驅動程式後下次使用時仍然有效，請您在更改配置後點擊驅動界面左邊的“確定”按鈕保存設置，如保存成功螢幕下方會提示您“配置保存成功”，如沒有保存，則修改的配置僅當前使用時有效。

## 1. 工作區域



## 1.1. 螢幕



數位屏的工作區域默認映射到整個螢幕顯示區域。

如果在擴展模式下使用多個顯示器，則需要在驅動程式界面上選擇數位屏工作區域映射到對應的顯示器上。

驅動提供三種模式設置螢幕顯示區域：

- 設置全屏：將已選擇顯示器的螢幕區域設置到最大。
- 選取螢幕區域：利用滑鼠來手動設定螢幕顯示區域。先用滑鼠點擊螢幕顯示區域的第一個位置(左上)，然後點擊第二個位置(右下)。
- 自定義螢幕區域：在X、Y、W、H下方對應的輸入框中手動輸入座標來自定義螢幕顯示區域的大小，也可在驅動界面螢幕圖示上利用滑鼠拖拉的方式調整螢幕顯示區域。

螢幕校準：

利用螢幕校準的功能可以避免您的數位筆與游標產生間距的問題。

螢幕標識：

標識所有已連接的顯示器，數字標識符會顯示在每個顯示器的左下角。

## 1.2. 數位板/屏



設定數位屏工作區域的任一部分映射為螢幕顯示區域，驅動程式提供四種模式可選：

- 全手寫區域：將數位屏的工作區域放到最大。
- 螢幕比例：將數位屏的工作區域與您的螢幕做等比例縮放。
- 設置工作區域：用數位筆點擊要選取的”左上角”位置和”右下角”位置。
- 自定義工作區域：在X、Y、W、H下方對應的輸入框中手動輸入座標確定數位屏工作區域大小，或用“數位筆”在驅動界面數位屏圖示上拖拉的方式來設定工作區域大小。

## 旋轉設置：

您可以將數位屏設定成0、90、180 & 270度。當您設定完成後亦要將設備旋轉到對應的方向。  
旋轉180度即為左手模式。

## 顯示螢幕設置：

設置數位屏的“色溫調節”、“USER”、“亮度”、“對比度”。




## 2. 應用程式

在筆設置頁面，您可在選擇應用程式後再針對此應用設定您想要的按鍵功能。




- 點擊應用程式欄右上的”+”來打開程式選擇界面。
- 從正在運行的程式中選擇需要添加的軟體或者點擊瀏覽按鈕從已安裝的軟體中添加；選擇應用後，底部會顯示已選中的應用程式的路徑。

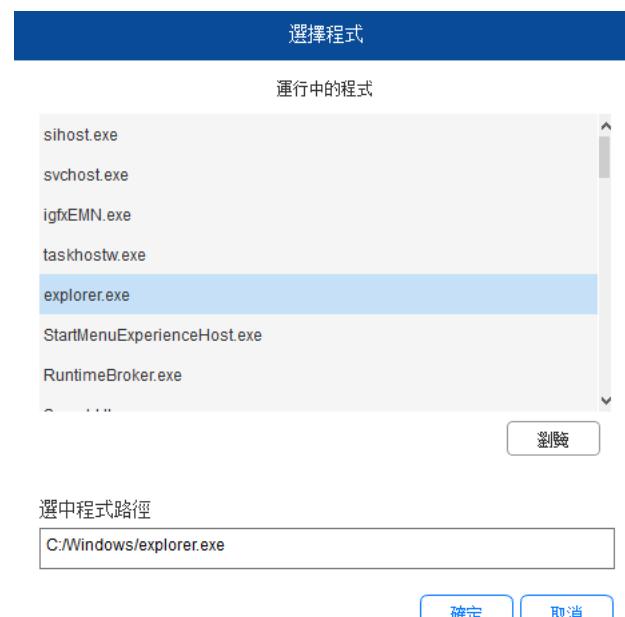

c. 點擊頁面下方的“確定”按鈕，剛才選中的應用將會添加到應用欄。

### 3. 筆設置

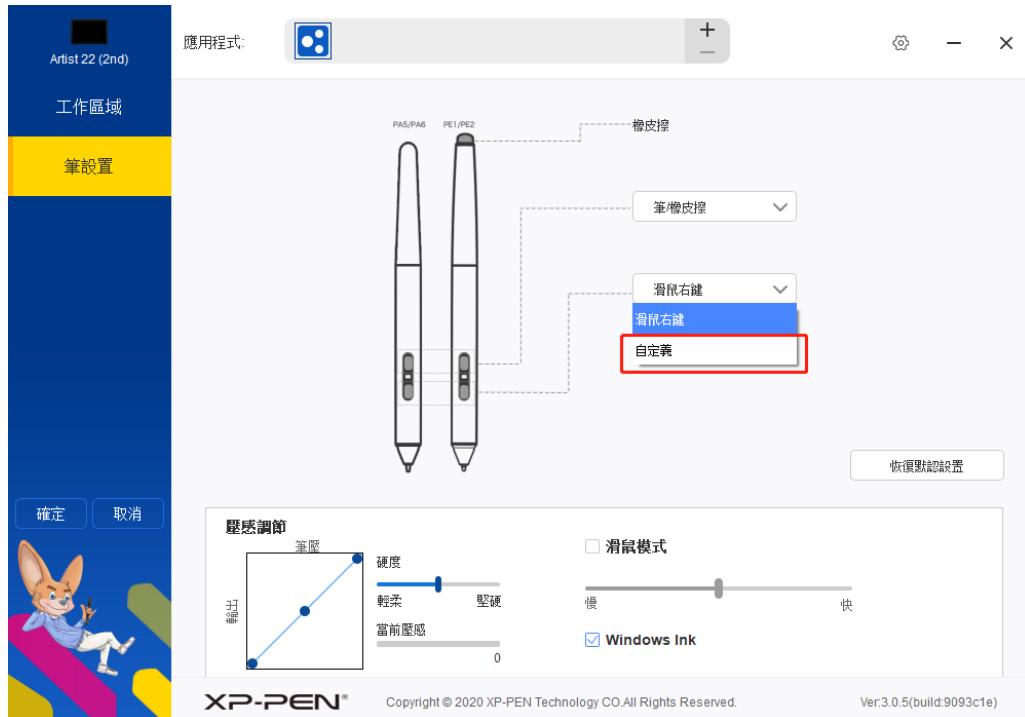

#### 筆按鍵：

在此設置筆按鍵的功能，您可點擊下拉式功能表使用“自定義”來設置筆按鍵功能。

#### 注意:

當數位筆位於數位屏工作範圍內時，單擊按鍵可以在筆或橡皮擦模式之間切換。當切換其他功能時，您的螢幕下方會顯示當前的切換模式。

在自定義功能中選擇從鍵盤輸入可以讓您自定義複合鍵功能。

#### 從鍵盤輸入：

可以在此處配置鍵盤快捷鍵，配合滑鼠可以在支援3D的繪圖軟體中使用旋轉等功能；例如在3D MAX軟體中將此處設置為Alt鍵，配合滑鼠中鍵就可以旋轉視圖等。



可在此處設置多組鍵盤快捷鍵，當您按下筆身按鍵時，您設置的快捷鍵功能會全部運行一遍。

### 注意：

精細模式是讓數位屏的工作區域限制在小範圍內。此功能可以讓您針對部份區域做更細緻的繪圖。

### 壓感調節：

通過調整”輸出”及”筆壓”曲線或移動進度條上的滑塊可以調節壓感的靈敏度。

當前壓力可以測試您目前施力的筆壓。

### 滑鼠模式：

滑鼠預設使用絕對模式，勾選此處即為使用相對模式，選中後可以調節滑鼠速度的快慢。

### 絕對座標(筆模式)：

此為標準的數位屏模式。絕對座標即是將您的螢幕顯示區域等比例縮小到數位屏的工作區域。

### 相對座標(滑鼠模式)：

此模式的操作方式如同一般滑鼠。

### Windows Ink：

部份繪圖軟體可以支援Windows Ink筆壓，您可以選取或取消”Windows Ink”來開啟或關閉此功能，默認開啟。

## 4. 設置



**禁用快捷鍵：**

勾選此功能可以關閉所有快捷鍵的功能。

**禁用提示資訊：**

勾選此功能，當使用快捷鍵時，螢幕下方將不會顯示快捷鍵提示資訊。

**禁用筆壓：**

勾選此功能後當您使用數位筆時將不會感受到您施力的筆壓。

**禁用側鋒：**

勾選此功能將禁用數位筆的側鋒效果。

**診斷工具：**

當您在驅動使用過程中出現問題時，可以使用診斷工具。

**導入&匯出設定檔：**

您可以將設定好的快捷鍵等功能的配置利用匯入&匯出的方式來儲存和讀取其設定值。

**注意:**

當您需要將變更的功能匯入&匯出，請先點擊驅動界面左邊的“確定”按鈕保存配置。

**若有任何的問題，請利用以下方式聯繫我們:**

**Web:** [www.xp-pen.com](http://www.xp-pen.com)

**Email:** [service@xp-pen.com](mailto:service@xp-pen.com)

